

INSTALLATION INSTRUCTIONS FOR TRIBAY SERIES QUIK-ZONE™ BOX CH-B — CH-Q



SEE WARNINGS ON CARTON

WARNINGS:

- Install, operate and maintain to meet all applicable codes.
- Handle and secure so fixture cannot fall.

GENERAL INFORMATION

- Quik-Zone™ box is an accessory provided to allow for early installation and completion of the electrical wiring prior to receipt of the lighting fixtures.
- Order fixtures with option, -L or -E; less Quik-Zone™ box.
- Minimum projection of customer supply leads should be 6 in. (153mm).
- All conduit entries are tapped 3/4-14 NPS.
- Plug all unused entries into mounting box.
- Use a waterproof pipe joint compound for all entries into mounting box for wet location fixtures.

PENDANT MOUNTING - FIGURE 1

1. Thread Quik-Zone™ mounting box (1) fully onto 3/4-14 NPS conduit.
2. Orient mounting box as desired.
3. Tighten set-screw (2).
4. Store cover by attaching it to the box or in another readily available place.

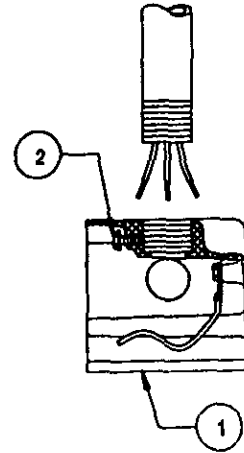


FIGURE 1
FIGURA 1

FLAT CEILING MOUNTING - FIGURE 2

1. Drill four 5/16 in. (8mm) holes in top of Quik-Zone™ mounting box (1) (use cast-in drill spots as a guide).
2. Secure mounting box with four 1/4 in. (6.3mm) min. fasteners (3) (by others) in a suitable manner.
3. Thread 3/4-14 NPS conduit into side hubs of the mounting box.
4. Install suitable bushings (4) (by others).
5. Store cover by attaching it to the box or in another readily available place.

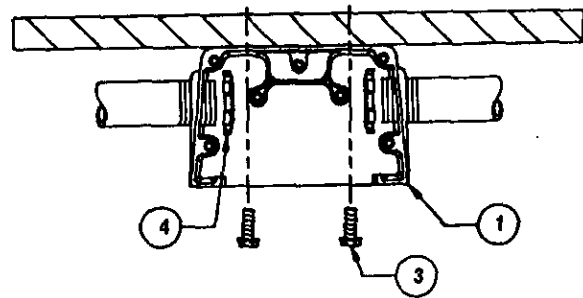


FIGURE 2
FIGURA 2

QUIK-ZONE™ BOX WITH QUICK-DISCONNECT: CH-Q - FIGURE 3

6. Complete either mounting above.
7. Connect supply wires to the wires connected to the quick-disconnect device (5). Connect both ground wires to supply ground.
8. Gather all wires and connectors and place and retain them above the quick-disconnect device.
9. Choose the correct voltage (6) from the label group supplied. Attach it (6) to the box (1) so that it is visible during fixture installation. This will indicate the voltage that is supplied to the quick disconnect device (5).

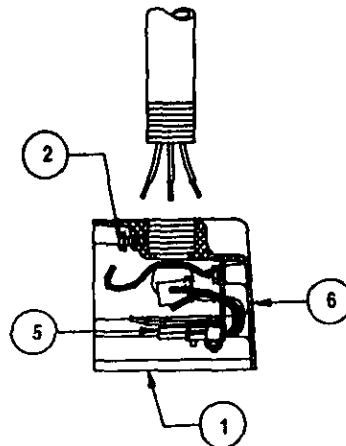


FIGURE 3
FIGURA 3

ASSEMBLY PROCEDURE AFTER FIXTURE ARRIVES

10. Slide ballast housing with reflector attached into the previously mounted Quik-Zone™ box.
*FOR QUICK-DISCONNECT EQUIPPED FIXTURES, this action simultaneously completes the electrical connection.
11. Check to make sure the voltage of a quick-disconnect equipped ballast housing agrees with the supply voltage that is marked on the mounting box label. Skip to Step 14.
*FOR STANDARD FIXTURES:
12. Connect supply wires to the fixture wires. Connect fixture ground wire to supply ground.
13. Place wires and connections back into mounting box.
SEE FIGURE 4
14. Install cover (7) with screws (8). For wet location fixtures, install sealing washers (9).

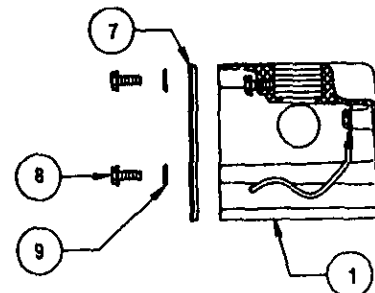


FIGURE 4
FIGURA 4



Hubbell Lighting, Inc.
A Subsidiary of Hubbell Incorporated
2000 Electric Way
Christiansburg, VA 24073-2500
(703) 382-6111
FAX (703) 382-1526

ORIGINAL DRAWING

268-1027-9901