



INSTRUCTIONS FOR INSTALLATION OF SUPERWATT® FIXTURES

Catalog Number Series: SWW and SWD
Pendant and Surface/Thru Wire Mounting


Please Read Thoroughly Before Installing

WARNING: When installing, relamping or otherwise servicing this fixture in any way, observe all precautions usually followed when dealing with high voltage equipment. Disregarding these precautions may result in electrical shock and possible injury to individual servicing the equipment. Never connect or disconnect any component while the power supply is ENERGIZED.

GENERAL INSTRUCTIONS - SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

1. Upon receipt of this accessory, thoroughly inspect it for any freight damage and if it is found, the carrier should be notified and held accountable.
2. Make sure supply line voltage being used is the same as that specified on the fixture nameplate.
3. All installations and wiring should be per National Electrical Code (N.E.C.) and local rules and regulations.
4. It is not necessary to remove lens to install or wire fixture.

FIG. 1

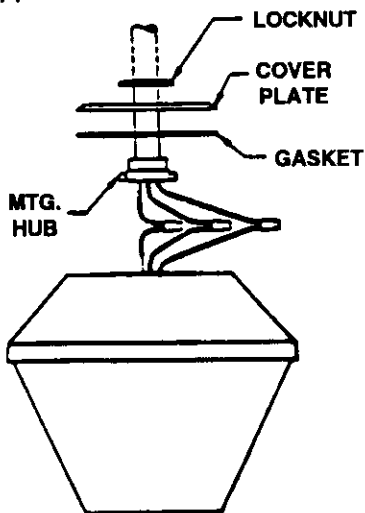

BALANCED PENDANT MOUNTING (FIGURE 1)

1. Carefully stick the gasket (supplied for wet locations) to the bottom of the cover plate (away from turned up edges).
2. Place locknut, cover plate/gasket combination up on conduit. Install mounting hub to 3/4" threaded conduit. Use a suitable thread lubricant to seal this threaded joint for wet locations against water leakage. Tighten hub set screw.
3. Lift fixture to mounting hub, with supply wires hanging out.
4. Rotate fixture 1/4 turn on hub and let hang while supply wires are connected to the correctly marked fixture wires corresponding to the supply voltage. Connect fixture ground wire to supply ground.
5. Tuck connected wires and extra wires inside wiring compartment in top of housing.
6. Slide fixture to balance on hub.
7. Bring cover plate and locknut down onto hub and tighten locknut to secure fixture in place. Make sure hub is oriented 90° to cutout opening, this will ensure that the flat sections on the hub lock in place in the opening in the top housing casting.



Hubbell Lighting, Inc.
A Subsidiary of Hubbell Incorporated
2000 Electric Way
Christiansburg, VA 24073-2500
(703) 382-6111
FAX (703) 382-1526

268-0619-9801

ORIGINAL DRAWING